



[STEP-1] CARA INSTALL DRIVER DAN SETUP PRINTER PERTAMA KALI


1. Download dan install driver (http://w1.ina-agri.tech/file_print/Software%20&%20Driver/Driver_BP%20TR110.zip)
2. Colokkan USB printer ke PC saat diminta software
3. Pada akhirnya akan muncul driver

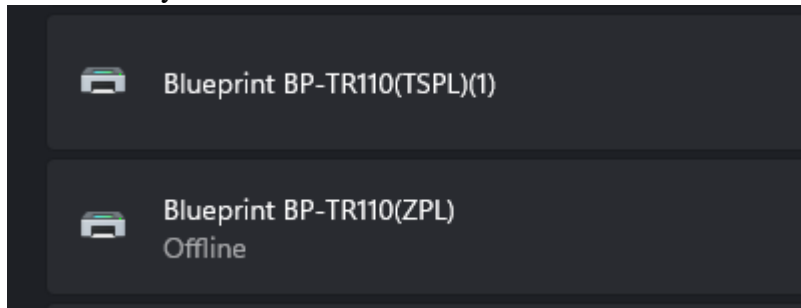


4. Printer TSPL > printer preferences > paper > klik “manager” ,, isi paper name , width dan length seperti pada gambar ,, lalu klik “save”. Dan select “Papaer Name” seperti nama yang baru saja di buat “50 x 20 x 2”

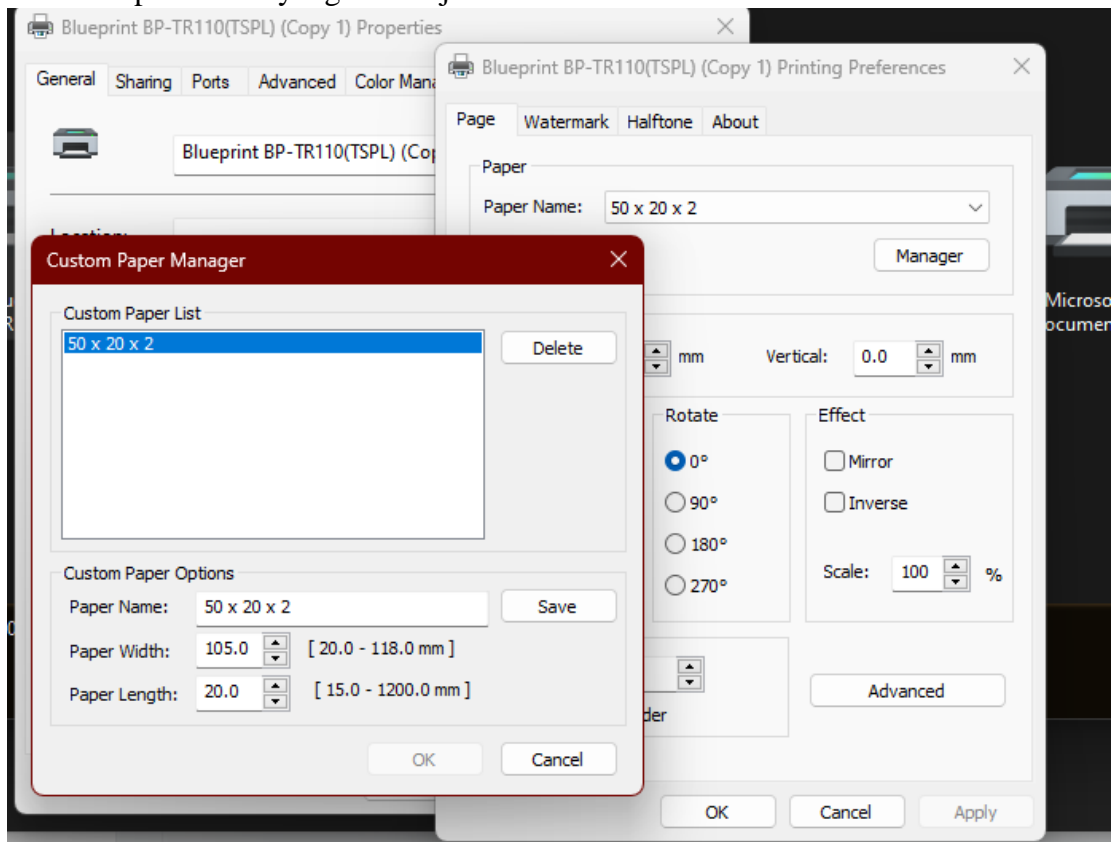

5. Klik advance menu preference

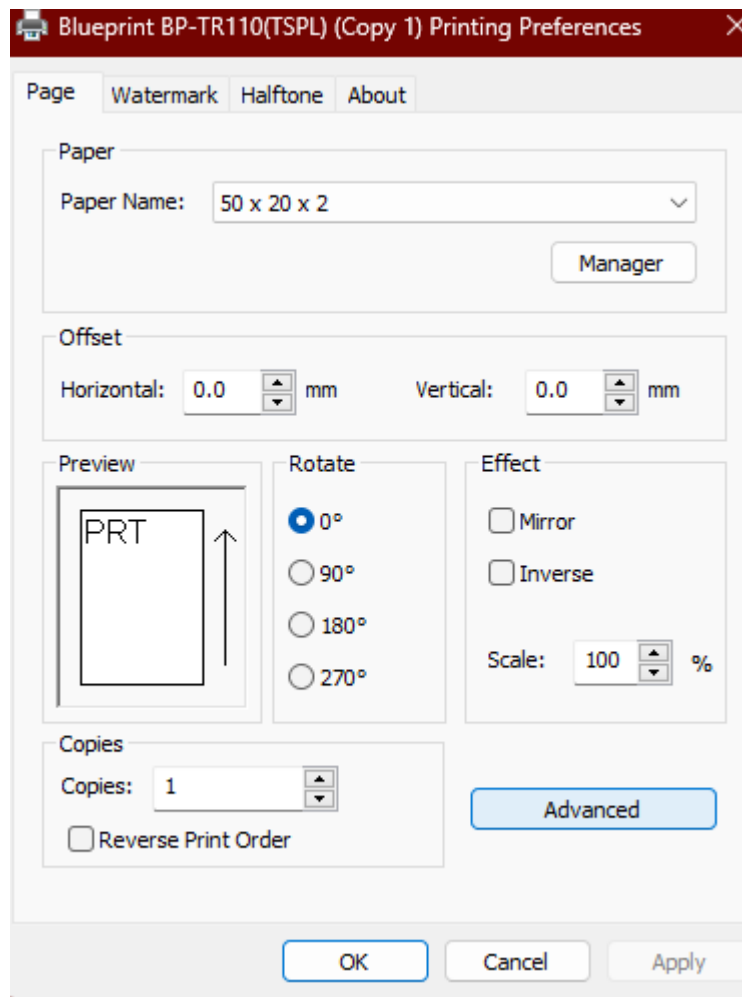


Disable compression,

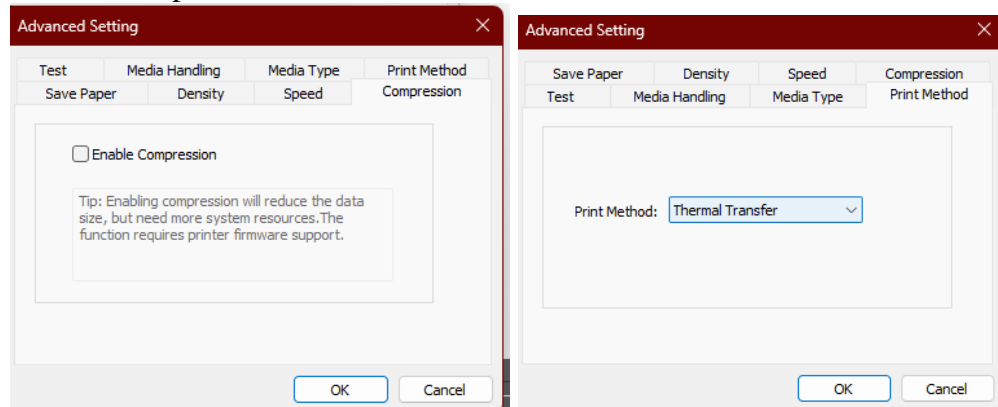


Klik ok dan oke dan selesai.

[STEP-2] PRINT LEWAT WIFI OFFICE


1. Pastikan printer tercolok ke LAN-Office
IP Printer : 192.168.100.2
2. Buka Setting > Bluetooth & Device > Printers & Scanners, klik add device

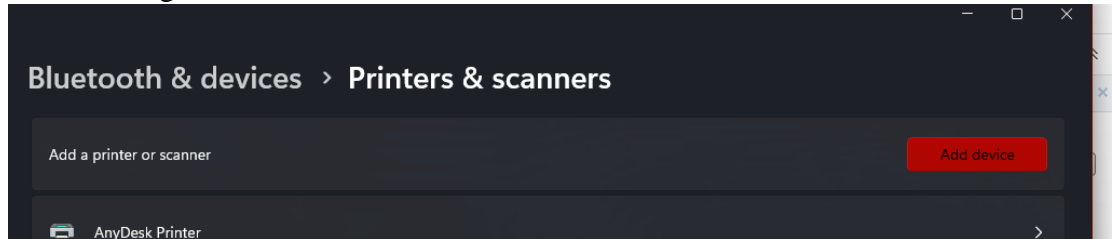

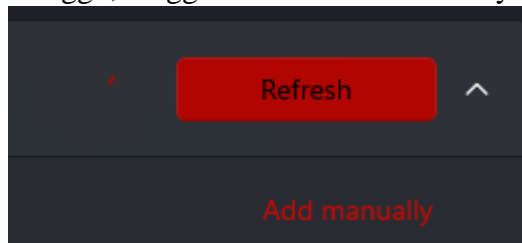


3. Tunggu, hingga muncul “add manually” lalu klik “add manually”

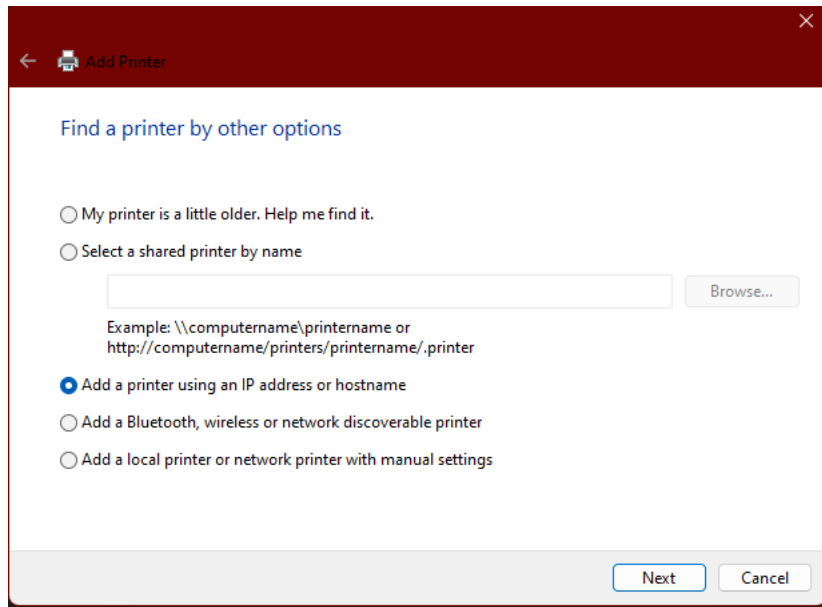


4. Pilih IP



5. Isikan “Autodetect” dan ip : “192.168.100.9”, selebihnya abaikan dan klik next

  Add Printer 

Type a printer hostname or IP address



Device type: Autodetect 

Hostname or IP address: 192.168.100.9




Port name: 192.168.100.9_1

☒ Query the printer and automatically select the driver to use

Autodetect detects WSD and TCP/IP printers.
To search for an IPP printer, IPP must be selected from the drop down menu.


 



6. Tunggu sejenak sambil ngopii

  Add Printer 




Detecting TCP/IP port

Detecting the TCP/IP port...
Windows will automatically move to the next page when the detection is done.



7. Ada tampilan berikut, klik next saja

  Add Printer 

Additional port information required

The device is not found on the network. Be sure that:

1. The device is turned on.
2. The network is connected.
3. The device is properly configured.
4. The address on the previous page is correct.

If you think the address is not correct, click Back to return to the previous page. Then correct the address and perform another search on the network. If you are sure the address is correct, select the device type below.

Device Type

☒ Standard

☐ Custom




Generic Network Card

Settings...

Next


Cancel

8. Tunggu dan ngopii dulu

  Add Printer 

Detecting the driver model...


Windows is communicating with the printer and will automatically detect the printer driver to use.




Next

Cancel


9. Jika diminta pilih printer silahkan pilih sesuai gambar berikut. Jika sebelumnya pernah install driver dan konek usb pasti akan ada list blueprint seperti dibawah. Pilih TR110-TSPL

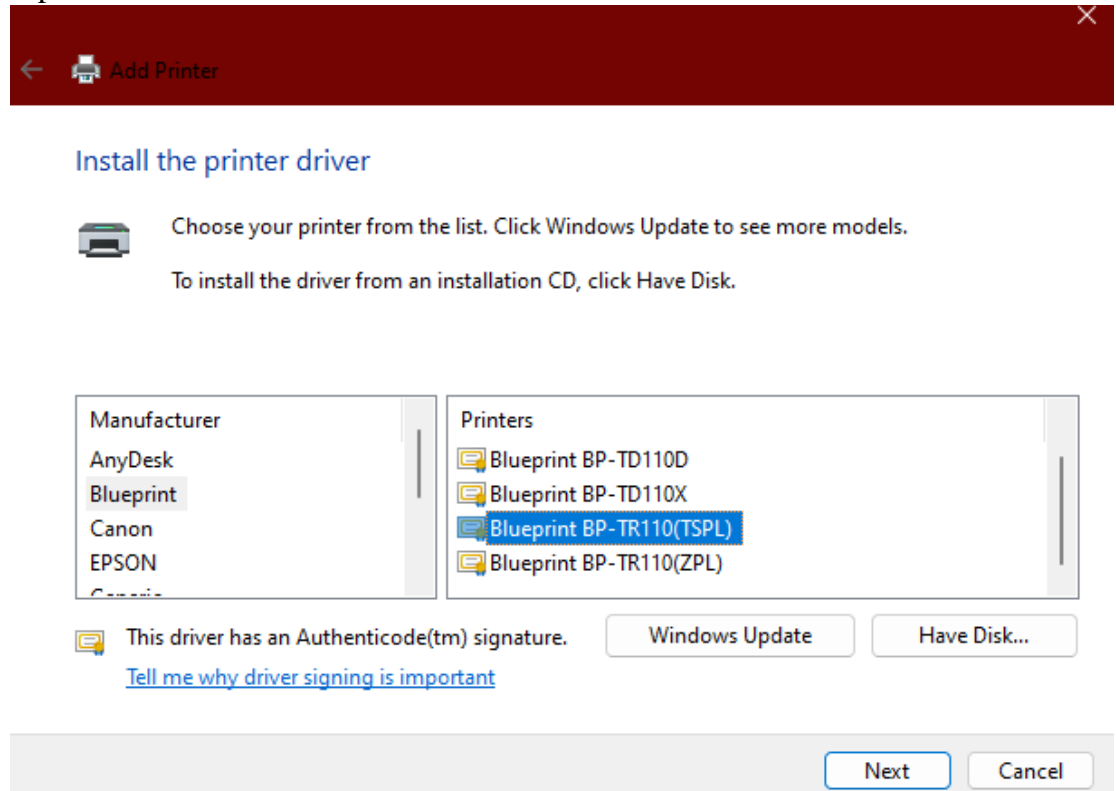

10. Bisa langsung next jika tampil berikut

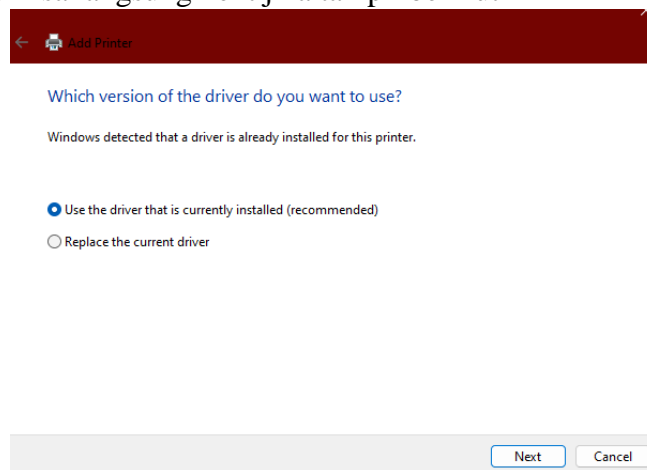

11. Akan di tampilkan nama printer jika akan print menggunakan LAN, jadi jika mau print pakai wifi silahkan pilih sesuai nama printer tersebut yang persis!

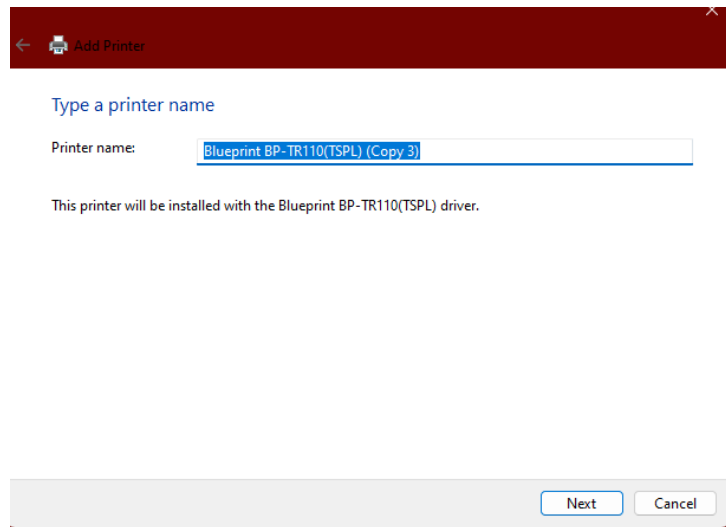

← Add Printer


Type a printer name

Printer name:

This printer will be installed with the Blueprint BP-TR110(TSPL) driver.

Next Cancel

Klik next dan klik dont share saja

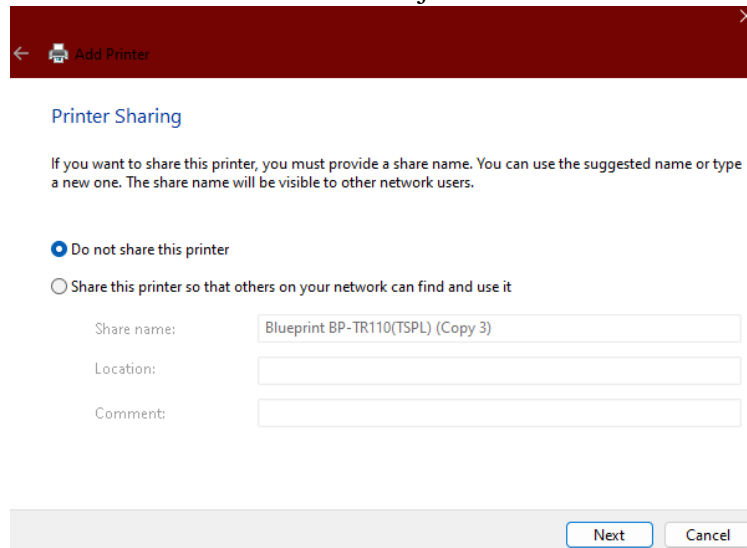

← Add Printer

Printer Sharing

If you want to share this printer, you must provide a share name. You can use the suggested name or type a new one. The share name will be visible to other network users.

☒ Do not share this printer

☐ Share this printer so that others on your network can find and use it

Share name:


Location:

Comment:

Next Cancel

Jangan test print klik finish saja


12. Ulangi STEP-1 langkah 4-6 untuk nama printer ini. Terpenting **setup paper** 50 x 20 x2 dan Print Method : **Termal Transfer**

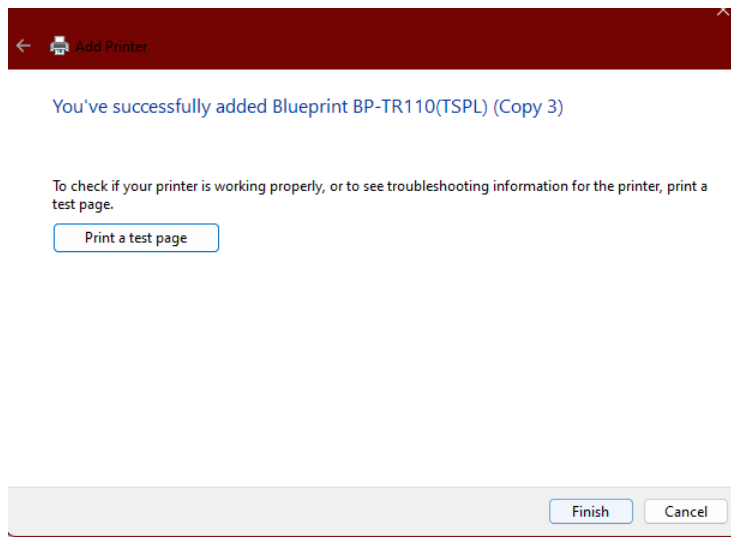


Jika akan print pke Dlabel langsung yang telah di konfigurasi.

[STEP-3] CARA SETUP PERTAMA KALI PRINT LABEL SOFTWARE


1. Instal software Dlabel
(Download di http://w1.ina-agri.tech/file_print/Software%20&%20Driver/Dlabel_PC.exe)
2. Open saved file template, (download dan ekstrak dulu di [http://w1.ina-agri.tech/file_print/template_fix\(extract%20dulu\).zip](http://w1.ina-agri.tech/file_print/template_fix(extract%20dulu).zip))
3. Mount Network file share, ketik //192.168.100.2 di bagian atas explorer.
(network discovery enable terlebih dahulu jika belum akan ada notifikasi untuk minta tur non)
[jika diminta user&password, user: anonymous. Password: (kosong).]

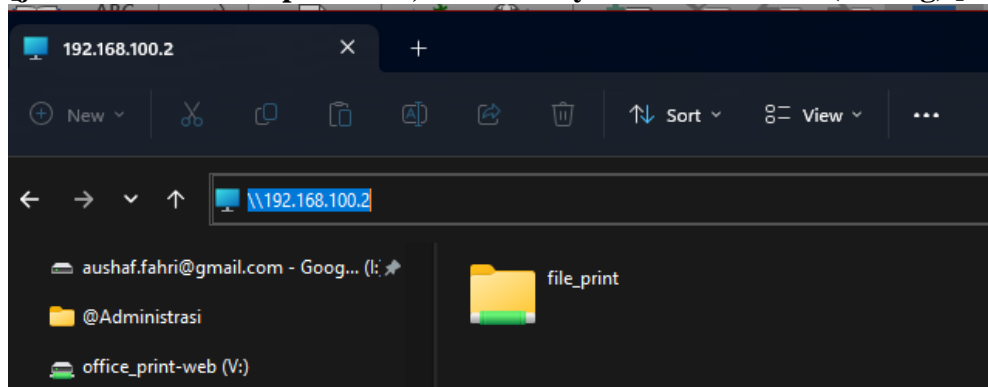


4. Klik kanan folder, dan klik map network device

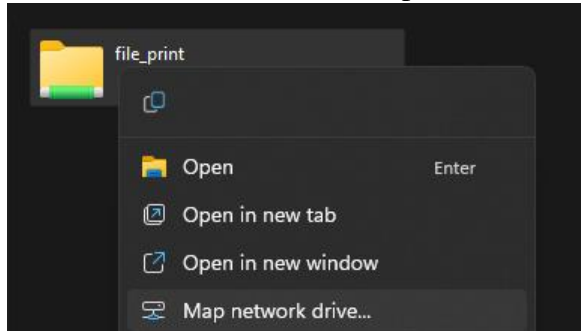

5. Langsung klik finish saja

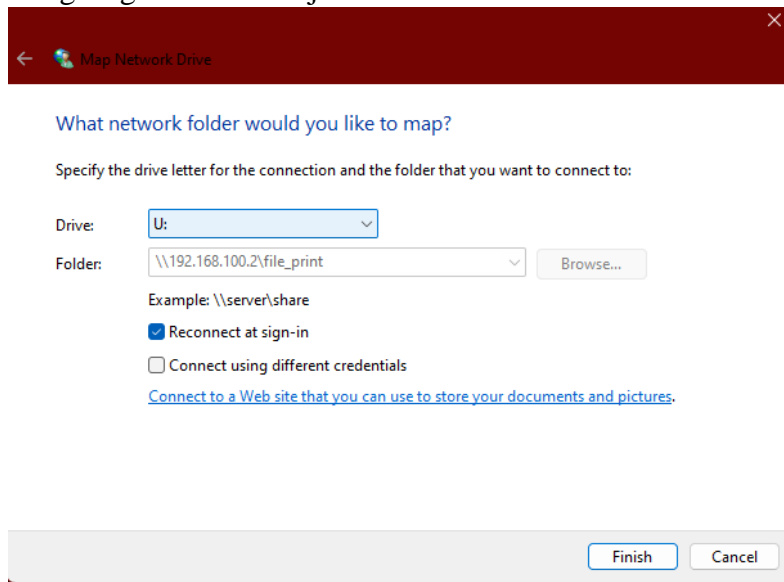

6. Pilih database (txt) dari file share

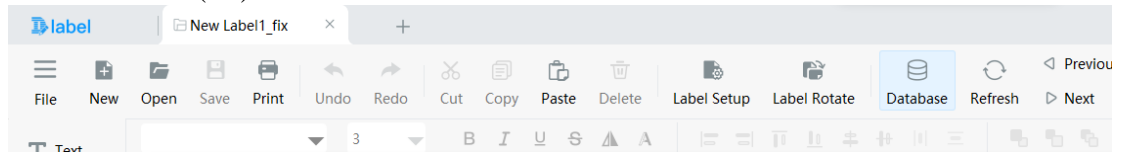

7. Pilih file share database d map network drive sperti gambar

Add database

Microsoft Excel

TXT file

MySQL

Microsoft Access

Microsoft SQL Server


Data Source

Path:

Select file

Setting

Character: Comma

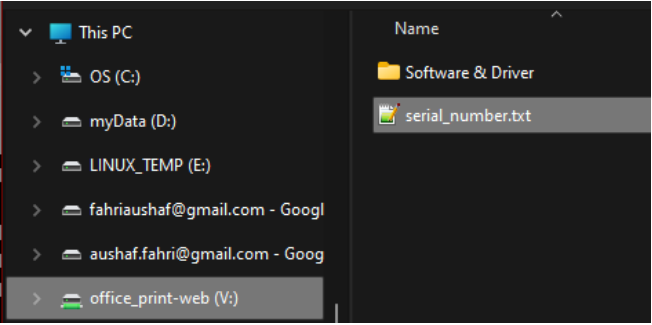

Add database

Microsoft Excel

TXT file

MySQL

Microsoft Access

Microsoft SQL Server

Data Source

Path: V:/serial_number.txt

Select file

Setting

Character: Comma

Ok

Cancel

8. Centang SN saja

Database management

serial_number

Setting

Field

Table name

Sheet

Select field

☐ Select all

☒ SN

☐ Field2

The number of previews is 1000

SN

OMO-TDWS-2-001

OMO-TDWS-2-002

OMO-TDWS-2-003

OMO-TDWS-2-004

OMO-TDWS-2-005

OMO-TDWS-2-006

OMO-TDWS-2-007

OMO-TDWS-2-008

OMO-TDWS-2-009

OMO-TDWS-2-010

OMO-TDWS-2-011

OMO-TDWS-2-012

OMO-TDWS-2-013

+

-

Ok

Cancel

9. Klik print pada tabel-batch-produksi

Show 10 entries

No.

Pemesan

Kategori

Batch Code

Tanggal Mulai Produksi

Printed

1

K24 Product

TDWS

1

1-1 of 1 entries

Print QR

Delete

1

Next

> akan muncul new tab seperti berikut

serial number converted into txt : /var/www/file_print/serial_number.txt

> Hingga “printed berubah jadi hijau”,

Create New

Show 10 entries

No.

Pemesan

Kategori

Batch Code

Tanggal Mulai Produksi

Printed

1


K24 Product

TDWS

1

1-1 of 1 entries

10. Refresh Database setelah klik print di web (Production Batch) hingga ceklist print

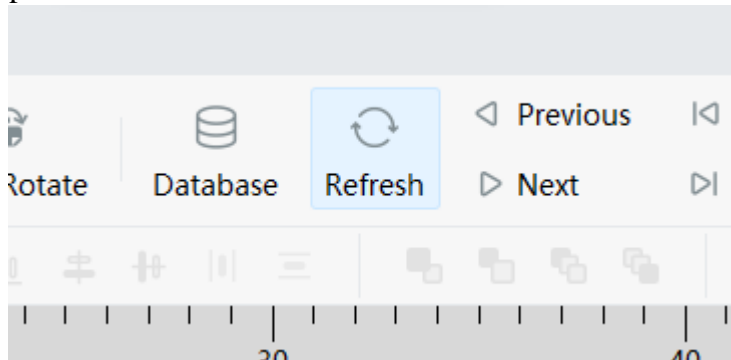

11. Print label (pastikan printer tersetting dengan benar)– harap pilih **ceklist bullet custom print**, isi **selected record 1-100** (kemudian enter jika ada perubahan untuk refresh). Pada bagian bawah Print(100) artinya akan printed 100 stiker.

Print Preview ×

Printer Set
Blueprint BP-TR110(TSPL) (Copy 2) ▼
Direction: ☒ Default ☐ Rotate 90° ☐ Rotate 180°

Setting Option
☐ Number 1 ▼
☒ Custom Print Default ▼

Data list




SN ▼ Search

<input checked="" type="checkbox"/>	Copies	SN
<input checked="" type="checkbox"/>	1	OMO-TDWS-2-001
<input checked="" type="checkbox"/>	1	OMO-TDWS-2-002
<input checked="" type="checkbox"/>	1	OMO-TDWS-2-003
<input checked="" type="checkbox"/>	1	OMO-TDWS-2-004
<input checked="" type="checkbox"/>	1	OMO-TDWS-2-005

The selected record: 100/100 1-100

Print(100)

File Name: New Label1_fix Label Size: 50*20 Column Count: 2



OMO-TDWS-2-001 OMO-TDWS-2-001 OMO-TDWS-2-001

+ - ↺ ↻ 1 Total 100 Page ▶ ▶▶

12. Klik Print(100) untuk mencetak semua label.
13. Ulangi langkah 9-12 untuk mencetak beda batch produksi